




SIM5360 SIM5320 ATC Comparison

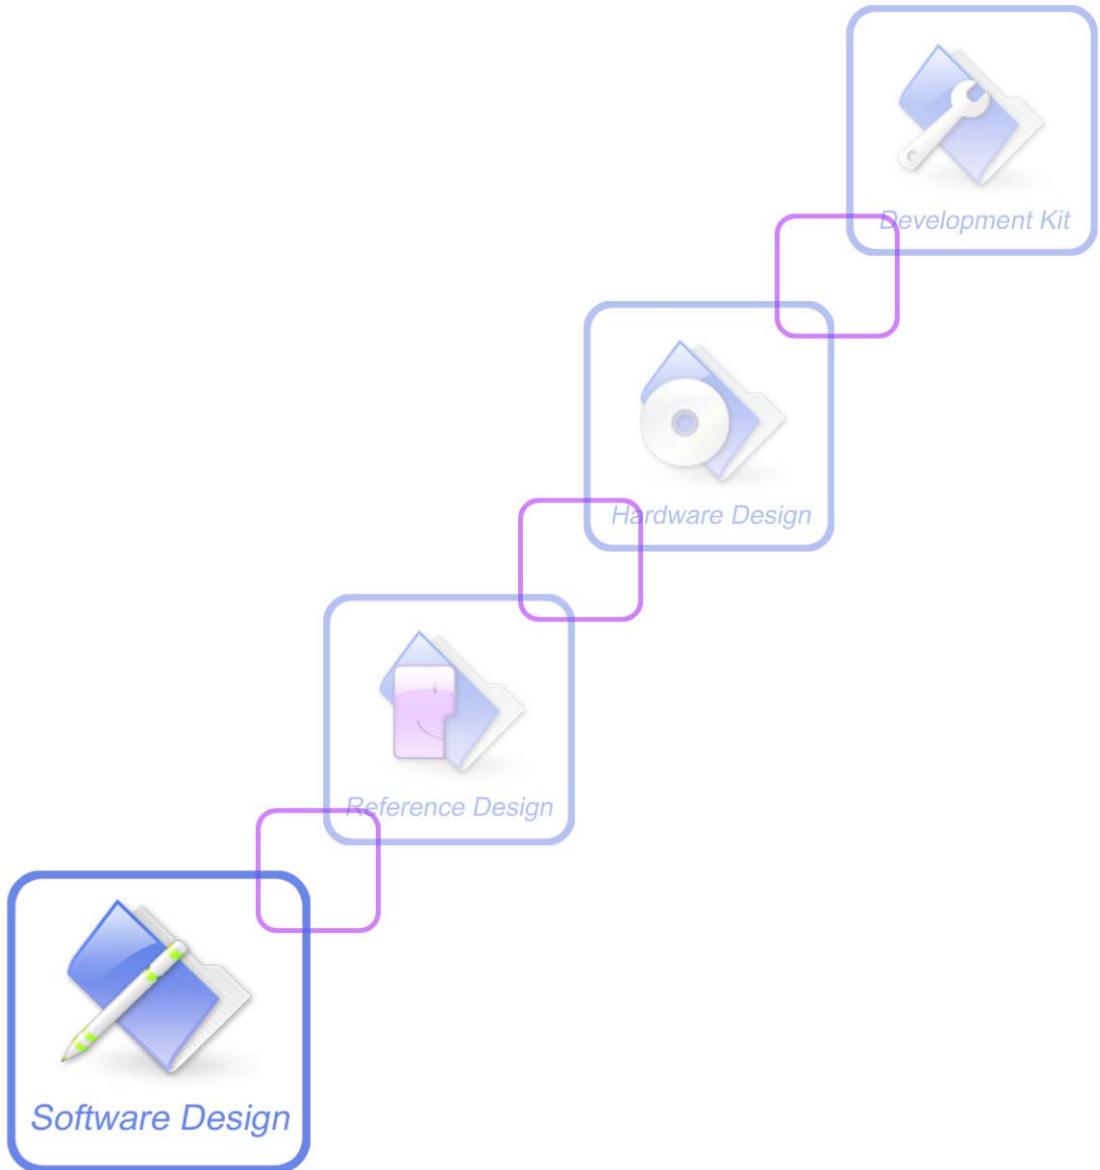

Document Title:	SIM5360 SIM5320 ATC Comparison
Version:	0.02
Date:	2014-02-24
Status:	Developing
Document ID:	SIM5360_SIM5320_ATC_Comparison_V0.02

General Notes

SIMCom offers this information as a service to its customers, to support application and engineering efforts that use the products designed by SIMCom. The information provided is based upon requirements specifically provided to SIMCom by the customers. SIMCom has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by SIMCom within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of SIMCom Limited., copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

Copyright © Shanghai SIMCom Wireless Solutions Ltd. 2014

Version History

Date	Version	Chapter	Comments
2014-1-6	V0.01	New Version	
2014-1-24	V0.02	Modify Version	<ul style="list-style-type: none"> 1、 In 3.1 AT*CNTI command,sim5320 does not support HSUPA, delete the command 2、 It does not need 5.7 AT+CUSBMSS,delete the command 3、 Fota : It has no difference with sim5360 and sim5320,delete the difference of the function describtion 4、 In 10.1.1 AT+CFTPSPUTFILE command,add a describtion to mark No.2 and No.3 the two issues are not support 5、 7.1 AT&Fcommand:In default table sim5360 is should not different with sim5320,modify the difference

Contents

Version History	2
Contents	3
1 Introduction.....	5
1.1 Scope.....	5
1.2 References.....	5
1.3 Terms and abbreviations.....	5
1.4 Definitions and conventions.....	6
2 Call Control Commands and Methods.....	8
2.1 AT+CSDVC Switch voice channel device.....	8
2.2 AT+CPCMREG Control PCM data transfer by diagnostics port.....	8
3 Network Service Related Commands	8
3.1 AT*CNTI Query Network Mode	9
4 Mobile Equipment Control and Status Commands	10
4.1 AT+CFUN Set phone functionality	10
4.2 AT+CSIMLOCK Request and change password	10
4.3 AT+DSWITCH Change diagnostics port mode	10
4.4 AT+CDELTA Write delta package to FOTA partition.....	10
5 Hardware Related Commands	12
5.1 AT+CMICAMP1 Set value of micamp1	12
5.2 AT+CTXGAIN Set TX Gain.....	12
5.3 AT+CRXGAIN Set RX Gain	12
5.4 AT+SIDET Digital attenuation of sidetone	12
5.5 AT+CECSET Adjust the effect for the given echo cancellation mode.....	13
5.6 AT+CGFUNC enable/disable the function for the special GPIO	13
5.7 AT+CUSBSPD Switch USB high or full speed	13
5.8 AT+CMTE Whether Shut Down the Module For High and Low Temperature	13
6 Phonebook Related Commands	15
6.1 AT+CPBS Select phonebook memory storage.....	15
7 Commands for Packet Domain	16
7.1 AT+CGDCONT Define PDP context.....	16
7.2 AT+CGTFT Traffic Flow Template	16
7.3 AT+CGQREQ Quality of service profile (requested)	17
7.4 AT+CGEQREQ 3G quality of service profile (requested).....	18
7.5 AT+CGQMIN Quality of service profile (minimum acceptable).....	19
7.6 AT+CGEQMIN 3G quality of service profile (minimum acceptable)	20
8 TCP/IP Related Commands	21
8.1 AT+CGSOCKCONT Define socket PDP context.....	21
8.2 AT+CGSOCKQREQ Quality of service profile (requested).....	21
8.3 AT+CGSOCKEQREQ 3G quality of service profile (requested)	22
8.4 AT+CGSOCKQMIND Quality of service profile(minimum acceptable).....	23
8.5 AT+CGSOCKEQMIN 3G quality of service profile (minimum acceptable)	24

10 Internet Service Command.....	26
10.1 Secure File Transfer Protocol Service.....	26
10.1.1AT+CFTPSPUTFILE Put a file in module EFS to FTPS server	26
10.1.2 AT+CFTPSGET Get a file from FTPS server to serial port	26
11 GPS Related Command.....	28
11.1 AT+CGPSINFO Get GPS fixed position information	28
11.2 AT+CGPSNMEA Configure NMEA sentence type.....	28
12 File System Related Commands.....	29
12.1 AT+FSMEM Check the size of available memory	29
12.2 AT+FSLOCA Select storage place	29
12.3 AT+FSFMT Format the storage card.....	30
Contact us	31

1 Introduction

1.1 Scope

The document describes the AT Command Comparison between the SIMCom Module SIM5360 and SIM5320.

Prior to using the Module, please read this document and the Version History to know the difference from the previous document.

1.2 References

The present document is based on the following standards:

- [1] ETSI GSM 01.04: Abbreviations and acronyms.
- [2] 3GPP TS 27.005: Use of Data Terminal Equipment – Data Circuit terminating Equipment (DTE – DCE) interface for Short Message Service (SMS) and Cell Broadcast Service (CBS).
- [3] 3GPP TS 27.007: AT command set for User Equipment (UE).
- [4] WAP-224-WTP-20010710-a
- [5] WAP-230-WSP-20010705-a
- [6] WAP-209-MMSEncapsulation-20010601-a
- [7] 3GPP2 C.R1001-C, Administration of Parameter Value Assignments for cdma2000 Wideband Spread Spectrum Standards, January 2002

1.3 Terms and abbreviations

For the purposes of the present document, the following abbreviations apply:

- AT ATTention; the two-character abbreviation is used to start a command line to be sent from TE/DTE to TA/DCE
- CSD Circuit Switched Data
- DCE Data Communication Equipment; Data Circuit terminating Equipment
- DCS Digital Cellular Network
- DTE Data Terminal Equipment
- DTMF Dual Tone Multi-Frequency
- EDGE Enhanced Data GSM Environment
- EGPRS Enhanced General Packet Radio Service
- GPIO General-Purpose Input/Output
- GPRS General Packet Radio Service
- GSM Global System for Mobile communications
- HSDPA High Speed Downlink Packet Access
- HSUPA High Speed Uplink Packet Access
- I2C Inter-Integrated Circuit

▪ IMEI	International Mobile station Equipment Identity
▪ IMSI	International Mobile Subscriber Identity
▪ ME	Mobile Equipment
▪ MO	Mobile-Originated
▪ MS	Mobile Station
▪ MT	Mobile-Terminated; Mobile Termination
▪ PCS	Personal Communication System
▪ PDU	Protocol Data Unit
▪ PIN	Personal Identification Number
▪ PUK	Personal Unlock Key
▪ SIM	Subscriber Identity Module
▪ SMS	Short Message Service
▪ SMS-SC	Short Message Service – Service Center
▪ TA	Terminal Adaptor; e.g. a data card (equal to DCE)
▪ TE	Terminal Equipment; e.g. a computer (equal to DTE)
▪ UE	User Equipment
▪ UMTS	Universal Mobile Telecommunications System
▪ USIM	Universal Subscriber Identity Module
▪ WCDMA	Wideband Code Division Multiple Access
▪ FTP	File Transfer Protocol
▪ HTTP	Hyper Text Transfer Protocol
▪ POP3	Post Office Protocol Version 3
▪ POP3 client	An client that can receive e-mail from POP3 server over TCP session
▪ RTC	Real Time Clock
▪ SMTP	Simple Mail Transfer Protocol
▪ SMTP client	An client that can transfer text-based e-mail to SMTP server over TCP session
▪ URC	Unsolicited Result Code
▪ MMS	Multimedia message system

1.4 Definitions and conventions

- For the purposes of the present document, the following syntactical definitions apply:

<CR>	Carriage return character.
<LF>	Linefeed character.
<...>	Name enclosed in angle brackets is a syntactical element. Brackets themselves do not appear in the command line.
[...]	Optional subparameter of AT command or an optional part of TA information response is enclosed in square brackets. Brackets themselves do not appear in the command line. If subparameter is not given, its value equals to its previous value or the recommended default value.
<u>underline</u>	Underlined defined subparameter value is the recommended default setting or factory setting.

2. Document conventions:

- ◆ Display the examples of AT commands with *Italic* format.
- ◆ Not display *blank-line* between command line and responses or inside the responses.
- ◆ Generally, the characters <CR> and <LF> are intentionally omitted throughout this document.
- ◆ If command response is ERROR, not list the ERROR response inside command syntax.

NOTE AT commands and responses in figures may be not following above conventions.

3. Special marks for commands or parameters:

SIM PIN – Is the command PIN protected?

YES – AT command can be used only when SIM PIN is READY.

NO – AT command can be used when SIM card is absent or SIM PIN validation is pending.

References – Where is the derivation of command?

3GPP TS 27.007 – 3GPP Technical Specification 127 007.

V.25ter – ITU-T Recommendation V.25ter.

Vendor – The command is supported by SIMCom.

2 Call Control Commands and Methods

2.1 AT+CSDVC Switch voice channel device

SIM5360	SIM5320
AT+CSDVC=<dev>	AT+CSDVC=<dev>[,<save>]
OK	OK
Defined values:	Defined values:
<dev>:	<dev>:
1 – handset	1 – handset
3 – speaker phone	3 – speaker phone
	4 – PCM interface
<save>:	<save>:
	0 – temporary voice device setting, after reboot it will be resumed.
	1 – permanent voice device setting.
Difference	Parameter <dev> is different, SIM5360 only support external PCM interface currently and not support Parameter <save>.

2.2 AT+CPCMREG Control PCM data transfer by diagnostics port

SIM5360	SIM5320
Not support this command	AT+CPCMREG=? +CPCMREG: (list of supported <n>s) OK
Difference	SIM5360 does not support this command now.

3 Network Service Related Commands

3.1 AT*CNTI Query Network Mode

SIM5360	SIM5320
AT*CNTI? *CNTI:<CNTI_option>, <network_mode> OK	AT*CNTI? *CNTI:<CNTI_option>, <network_mode> OK
Defined values: <network_mode>: NONE GSM GPRS EDGE UMTS HSDPA HSUPA HSPA	Defined values: <network_mode>: NONE GSM GPRS EDGE UMTS HSDPA
AT*CNTI =<CNTI_option> *CNTI:<CNTI_option>, <network_mode>s OK ERROR	AT*CNTI =<CNTI_option> *CNTI:<CNTI_option>, <network_mode>s OK ERROR
Defined values: <network_mode>: NONE GSM GPRS EDGE UMTS HSDPA HSUPA HSPA	Defined values: <network_mode>: NONE GSM GPRS EDGE UMTS HSDPA
Difference	Parameter < network_mode > is different, SIM5360 supports HSPA currently. SIM5320 does not support HSUPA.

4 Mobile Equipment Control and Status Commands

4.1 AT+CFUN Set phone functionality

	SIM5360	SIM5320
Difference		
	SIM5360 reset from online mode to offline mode, the SIM card will be powered off if existed; If SIM5360 module reset from offline mode to online mode, the SIM card will be powered on if existed; And SIM card status will be reported as +CPIN: <code>; SIM5320 does not power on/off the SIM card correspondingly	

4.2 AT+CSIMLOCK Request and change password

	SIM5360	SIM5320
Difference	Not support this command	AT+CSIMLOCK=<facility>[,<old password>,<new password>] OK <i>If error:</i> +CME ERROR: <err>
Difference		SIM5360 does not support this command.

4.3 AT+DSWITCH Change diagnostics port mode

	SIM5360	SIM5320
Difference	Not support this command	AT+DSWITCH =<mode> OK <i>If error:</i> ERROR
Difference		SIM5360 does not support this command.

4.4 AT+CDELTA Write delta package to FOTA partition

SIM5360	SIM5320
Not support this command	AT+CDELT= <delta_package> +CDELT: 1 OK <i>If error:</i> +CDELT: 0,<err_code> OK
Difference	SIM5360 does not support this command.

5 Hardware Related Commands

5.1 AT+CMICAMP1 Set value of micamp1

SIM5360	SIM5320
Not support this command	AT+CMICAMP1= <amp_val> OK <i>If error:</i> ERROR
Difference	SIM5360 does not support this command.

5.2 AT+CTXGAIN Set TX Gain

SIM5360	SIM5320
Not support this command	AT+CTXGAIN= <tx_gain> OK <i>If error:</i> ERROR
Difference	SIM5360 does not support this command.

5.3 AT+CRXGAIN Set RX Gain

SIM5360	SIM5320
Not support this command	AT+CRXGAIN= <rx_gain> OK <i>If error:</i> ERROR
Difference	SIM5360 does not support this command.

5.4 AT+SIDET Digital attenuation of sidetone

SIM5360	SIM5320
Not support this command	AT+SIDET= <st> OK <i>If error:</i> ERROR
Difference	SIM5360 does not support this command.

5.5 AT+CECSET Adjust the effect for the given echo cancellation mode

SIM5360	SIM5320
AT+CECSET= <index>,<value>	AT+CECSET= <index>,<value>
OK	OK
<i>If error:</i>	<i>If error:</i>
ERROR	ERROR
<index>:	<index>:
0 – 48, EC has 49 parameters; this is the index of the selected parameter.	0 – 37, EC has 38 parameters; this is the index of the selected parameter.
Difference	The number of echo cancellation parameter in SIM5360 is different from SIM5320.

5.6 AT+CGFUNC enable/disable the function for the special GPIO

SIM5360	SIM5320
AT+CGFUNC =<function>,<switch>	AT+CGFUNC =<function>,<switch>
<function>range: 1,2,3,4,7,9,10,11,12,13,14,17,18,19,20	<function>range: 1,2,3,4,7,9,10,11,12,13,14,17,18
Difference	SIM5360 add two functions. One is switch the SPI and GPIO, the other is switch the I2C and GPIO.

5.7 AT+CUSBSPD Switch USB high or full speed

SIM5360	SIM5320
AT+CUSBSPD=?	AT+CUSBSPD=?
+CUSBSPD: (0-1)	+CUSBSPD: (0-1)
OK	OK
Difference	SIM5360 changes default value from full speed to high speed

5.8 AT+CMTE Whether Shut Down the Module For High and Low Temperature

SIM5360	SIM5320
AT+CMTE=<value>	Not support this command
OK	
<i>If error:</i>	

ERROR

Difference

SIM5360 add this command.

6 Phonebook Related Commands

6.1 AT+CPBS Select phonebook memory storage

	SIM5360	SIM5320
	<code>AT+CPBS=?</code> <code>+CPBS:</code> <code>("SM","DC","FD","LD","MC","ME","RC","EN</code> <code>","ON","SN")</code> <code>OK</code>	<code>AT+CPBS=?</code> <code>+CPBS:</code> <code>("SM","DC","FD","LD","MC","ME","RC","EN</code> <code>","ON","SN")</code> <code>OK</code>
Difference	SIM5360	SIM5320
	<p>"DC" ME dialed calls list Capacity: max. 20 entries <code>AT+CPBW</code> command is not applicable to this storage.</p> <p>"MC" ME missed (unanswered received) calls list Capacity: max. 20 entries <code>AT+CPBW</code> command is not applicable to this storage.</p> <p>"RC" ME received calls list Capacity: max. 20 entries</p> <p>"EN" Emergency numbers Capacity: depending on SIM card</p>	<p>"DC" ME dialed calls list Capacity: max. 10 entries <code>AT+CPBW</code> command is not applicable to this storage.</p> <p>"MC" ME missed (unanswered received) calls list Capacity: max. 10 entries <code>AT+CPBW</code> command is not applicable to this storage.</p> <p>"RC" ME received calls list Capacity: max. 10 entries</p> <p>"EN" Emergency numbers Capacity: max. 50 entries</p>

7 Commands for Packet Domain

7.1 AT+CGDCONT Define PDP context

<p style="text-align: center;">SIM5360</p> <pre>AT+CGDCONT=<cid>[,<PDP_type>[,<APN>[<PDP_addr>[,<d_comp>[,<h_comp>]]]]] OK <i>If error:</i> ERROR</pre>	<p style="text-align: center;">SIM5320</p> <pre>AT+CGDCONT=<cid>[,<PDP_type>[,<APN>[<PDP_addr>[,<d_comp>[,<h_comp>]]]]] OK <i>If error:</i> ERROR</pre>
<p>Difference</p> <p style="text-align: center;">SIM5360</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <p>IP Internet Protocol PPP Point to Point Protocol IPV6 Internet Protocol Version 6 IPV4V6 Dual PDN Stack</p> <p style="text-align: center;">SIM5320</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <p>IP Internet Protocol PPP Point to Point Protocol IPV6 Internet Protocol Version 6</p>	

7.2 AT+CGTFT Traffic Flow Template

<p style="text-align: center;">SIM5360</p> <pre>AT+CGTFT=? +CGTFT: <PDP_type>,(list of supported <packet filter identifier>s),(list of supported <evaluation precedence index>s),(list of supported <source address and subnet mask>s),(list of supported <protocol number (ipv4) / next header (ipv6)>s),(list of supported <destination port range>s),(list of supported <source port range>s),(list of supported <ipsec security parameter index (spi)>s),(list of supported <type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask>s),(list of</pre>	<p style="text-align: center;">SIM5320</p> <pre>AT+CGTFT=? +CGTFT: <PDP_type>,(list of supported <packet filter identifier>s),(list of supported <evaluation precedence index>s),(list of supported <source address and subnet mask>s),(list of supported <protocol number (ipv4) / next header (ipv6)>s),(list of supported <destination port range>s),(list of supported <source port range>s),(list of supported <ipsec security parameter index (spi)>s),(list of supported <type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask>s),(list of</pre>
--	--

	<p>supported <flow label (ipv6)>s),(list of supported <direction>s)</p> <p>[<CR><LF>+CGTFT: <PDP_type>,(list of supported <packet filter identifier>s),(list of supported <evaluation precedence index>s),(list of supported <source address and subnet mask>s),(list of supported <protocol number (ipv4) / next header (ipv6)>s),(list of supported <destination port range>s),(list of supported <source port range>s),(list of supported <ipsec security parameter index (spi)>s),(list of supported <type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask>s),(list of supported <flow label (ipv6)>s),(list of supported <direction>s)</p> <p>[...]]</p> <p>OK</p> <p>OK</p>	<p>supported <flow label (ipv6)>s),(list of supported <direction>s)</p> <p>[<CR><LF>+CGTFT: <PDP_type>,(list of supported <packet filter identifier>s),(list of supported <evaluation precedence index>s),(list of supported <source address and subnet mask>s),(list of supported <protocol number (ipv4) / next header (ipv6)>s),(list of supported <destination port range>s),(list of supported <source port range>s),(list of supported <ipsec security parameter index (spi)>s),(list of supported <type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask>s),(list of supported <flow label (ipv6)>s),(list of supported <direction>s)</p> <p>[...]]</p> <p>OK</p>
Difference	<p>SIM5360</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <p>IP Internet Protocol</p> <p>PPP Point to Point Protocol</p> <p>IPV6 Internet Protocol Version 6</p> <p>IPV4V6 Dual PDN Stack</p> <p>SIM5320</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <p>IP Internet Protocol</p> <p>PPP Point to Point Protocol</p> <p>IPV6 Internet Protocol Version 6</p>	

7.3 AT+CGQREQ Quality of service profile (requested)

SIM5360	SIM5320
<p>AT+CGQREQ=?</p> <p>+CGQREQ: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s) , (list of supported <peak>s), (list of supported <mean>s)</p> <p>[<CR><LF> +CGQREQ: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s) , (list of supported <peak>s), (list of supported <mean>s)]</p>	<p>AT+CGQREQ=?</p> <p>+CGQREQ: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s) , (list of supported <peak>s), (list of supported <mean>s)</p> <p>[<CR><LF> +CGQREQ: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s) , (list of supported <peak>s), (list of supported <mean>s)]</p>

	<p>supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s) , (list of supported <peak>s), (list of supported <mean>s)</p> <p>[...]]</p> <p>OK</p> <p><i>If error:</i></p> <p>ERROR</p>	<p>supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s) , (list of supported <peak>s), (list of supported <mean>s)</p> <p>[...]]</p> <p>OK</p> <p><i>If error:</i></p> <p>ERROR</p>
Difference	<p>SIM5360</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <p>IP Internet Protocol</p> <p>PPP Point to Point Protocol</p> <p>IPV6 Internet Protocol Version 6</p> <p>IPV4V6 Dual PDN Stack</p> <p>SIM5320</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <p>IP Internet Protocol</p> <p>PPP Point to Point Protocol</p> <p>IPV6 Internet Protocol Version 6</p>	

7.4 AT+CGEQREQ 3G quality of service profile (requested)

	SIM5360	SIM5320
	<p>AT+CGEQREQ=?</p> <p>+CGEQREQ: <PDP_type>,(list of supported <Traffic class>s),(list of supported <Maximum bitrate UL>s),(list of supported <Maximum bitrate DL>s),(list of supported <Guaranteed bitrate UL>s),(list of supported <Guaranteed bitrate DL>s),(list of supported <Delivery order>s),(list of supported <Maximum SDU size>s),(list of supported <SDU error ratio>s),(list of supported <Residual bit error Ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of Supported <Transfer delay>s),(list of supported <Traffic handling priority>s)</p> <p>OK</p>	<p>AT+CGEQREQ=?</p> <p>+CGEQREQ: <PDP_type>,(list of supported <Traffic class>s),(list of supported <Maximum bitrate UL>s),(list of supported <Maximum bitrate DL>s),(list of supported <Guaranteed bitrate UL>s),(list of supported <Guaranteed bitrate DL>s),(list of supported <Delivery order>s),(list of supported <Maximum SDU size>s),(list of supported <SDU error ratio>s),(list of supported <Residual bit error Ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of Supported <Transfer delay>s),(list of supported <Traffic handling priority>s)</p> <p>OK</p>
Difference	<p>SIM5360</p>	

	<p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <ul style="list-style-type: none"> IP Internet Protocol PPP Point to Point Protocol IPV6 Internet Protocol Version 6 IPV4V6 Dual PDN Stack <p>SIM5320</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <ul style="list-style-type: none"> IP Internet Protocol PPP Point to Point Protocol IPV6 Internet Protocol Version 6
	.

7.5 AT+CGQMIN Quality of service profile (minimum acceptable)

<p>SIM5360</p> <p>AT+CGQMIN=?</p> <p>+CGEQMIN: <PDP_type>, (list of supported <Traffic class>s), (list of supported <Maximum bitrate UL>s), (list of supported <Maximum bitrate DL>s), (list of supported <Guaranteed bitrate UL>s), (list of supported <Guaranteed bitrate DL>s), (list of supported <Delivery order>s), (list of supported <Maximum SDU size>s), (list of supported <SDU error ratio>s), (list of supported <Residual bit error Ratio>s), (list of supported <Delivery of erroneous SDUs>s), (list of supported <Transfer delay>s), (list of supported <Traffic handling priority>s)</p> <p>OK</p>	<p>SIM5320</p> <p>AT+CGQMIN=?</p> <p>+CGQMIN: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s), (list of supported <peak>s), (list of supported <mean>s)</p> <p>[<CR><LF> +CGQMIN: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s), (list of supported <peak>s), (list of supported <mean>s)[...]]</p> <p>OK</p> <p><i>If error:</i></p> <p>ERROR</p>
<p>Difference</p>	<p>SIM5360</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <ul style="list-style-type: none"> IP Internet Protocol PPP Point to Point Protocol IPV6 Internet Protocol Version 6 IPV4V6 Dual PDN Stack <p>SIM5320</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p>

	IP Internet Protocol PPP Point to Point Protocol IPV6 Internet Protocol Version 6
--	---

7.6 AT+CGEQMIN 3G quality of service profile (minimum acceptable)

	SIM5360	SIM5320
AT+CGEQMIN=?	<p>+CGEQMIN: <PDP_type>,(list of supported <Traffic class>s),(list of supported <Maximum bitrate UL>s),(list of supported <Maximum bitrate DL>s),(list of supported <Guaranteed bitrate UL>s),(list of supported <Guaranteed bitrate DL>s),(list of supported <Delivery order>s),(list of supported <Maximum SDU size>s),(list of supported <SDU error ratio>s),(list of supported <Residual bit error Ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of supported <Transfer delay>s),(list of supported <Traffic handling priority>s)</p> <p>OK</p>	<p>+CGEQMIN: <PDP_type>,(list of supported <Traffic class>s),(list of supported <Maximum bitrate UL>s),(list of supported <Maximum bitrate DL>s),(list of supported <Guaranteed bitrate UL>s),(list of supported <Guaranteed bitrate DL>s),(list of supported <Delivery order>s),(list of supported <Maximum SDU size>s),(list of supported <SDU error ratio>s),(list of supported <Residual bit error Ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of supported <Transfer delay>s),(list of supported <Traffic handling priority>s)</p> <p>OK</p>
Difference	<p>SIM5360</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <p>IP Internet Protocol PPP Point to Point Protocol IPV6 Internet Protocol Version 6 IPV4V6 Dual PDN Stack</p> <p>SIM5320</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <p>IP Internet Protocol PPP Point to Point Protocol IPV6 Internet Protocol Version 6</p>	

8 TCP/IP Related Commands

8.1 AT+CGSOCKCONT Define socket PDP context

	SIM5360	SIM5320
Difference	<p>AT+CGSOCKCONT=<cid>[,<PDP_type>[,<APN>[,<PDP_addr>[,<d_comp>[,<h_comp>]]]]]</p> <p>OK</p> <p><i>If error:</i></p> <p>ERROR</p>	<p>AT+CGSOCKCONT=<cid>[,<PDP_type>[,<APN>[,<PDP_addr>[,<d_comp>[,<h_comp>]]]]]</p> <p>OK</p> <p><i>If error:</i></p> <p>ERROR</p>

8.2 AT+CGSOCKQREQ Quality of service profile (requested)

	SIM5360	SIM5320
	<p>AT+CGSOCKQREQ=?</p> <p>+CGSOCKQREQ: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s) , (list of supported <peak>s), (list of supported <mean>s) [<CR><LF> +CGSOCKQREQ: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s) , (list of supported <peak>s), (list of supported <mean>s)</p> <p>[...]]</p>	<p>AT+CGSOCKQREQ=?</p> <p>+CGSOCKQREQ: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s) , (list of supported <peak>s), (list of supported <mean>s) [<CR><LF> +CGSOCKQREQ: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s) , (list of supported <peak>s), (list of supported <mean>s)</p> <p>[...]]</p>

	OK <i>If error:</i> ERROR	OK <i>If error:</i> ERROR
Difference	<p>SIM5360</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <ul style="list-style-type: none"> IP Internet Protocol PPP Point to Point Protocol IPV6 Internet Protocol Version 6(reserved) IPV4V6 Dual PDN Stack <p>SIM5320</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <ul style="list-style-type: none"> IP Internet Protocol PPP Point to Point Protocol IPV6 Internet Protocol Version 6(reserved) 	

8.3 AT+CGSOCKEQREQ 3G quality of service profile (requested)

SIM5360	SIM5320
<p>AT+CGSOCKEQREQ=?</p> <p>+CGSOCKEQREQ: <PDP_type>,(list of supported <Traffic class>s),(list of supported <Maximum bitrate UL>s),(list of supported <Maximum bitrate DL>s),(list of supported <Guaranteed bitrate UL>s),(list of supported <Guaranteed bitrate DL>s),(list of supported <Delivery order>s),(list of supported <Maximum SDU size>s),(list of supported <SDU error ratio>s),(list of supported <Residual bit error Ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of Supported <Transfer delay>s),(list of supported <Traffic handling priority>s) [<CR><LF>]</p> <p>+CGSOCKEQREQ: <PDP_type>,(list of supported <Traffic class>s),(list of supported <Maximum bitrate UL>s),(list of supported <Maximum bitrate DL>s),(list of supported <Guaranteed bitrate UL>s),(list of supported <Guaranteed bitrate DL>s),(list of supported <Delivery order>s),(list of supported <Maximum SDU size>s),(list of supported <SDU error ratio>s),(list of supported <Residual bit error Ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of Supported <Transfer delay>s),(list of supported <Traffic handling priority>s) [<CR><LF>]</p>	<p>AT+CGSOCKEQREQ=?</p> <p>+CGSOCKEQREQ: <PDP_type>,(list of supported <Traffic class>s),(list of supported <Maximum bitrate UL>s),(list of supported <Maximum bitrate DL>s),(list of supported <Guaranteed bitrate UL>s),(list of supported <Guaranteed bitrate DL>s),(list of supported <Delivery order>s),(list of supported <Maximum SDU size>s),(list of supported <SDU error ratio>s),(list of supported <Residual bit error Ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of Supported <Transfer delay>s),(list of supported <Traffic handling priority>s) [<CR><LF>]</p> <p>+CGSOCKEQREQ: <PDP_type>,(list of supported <Traffic class>s),(list of supported <Maximum bitrate UL>s),(list of supported <Maximum bitrate DL>s),(list of supported <Guaranteed bitrate UL>s),(list of supported <Guaranteed bitrate DL>s),(list of supported <Delivery order>s),(list of supported <Maximum SDU size>s),(list of supported <SDU error ratio>s),(list of supported <Residual bit error Ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of Supported <Transfer delay>s),(list of supported <Traffic handling priority>s) [<CR><LF>]</p>

	<Delivery order>s),(list of supported <Maximum SDU size>s),(list of supported <SDU error ratio>s),(list of supported <Residual bit error Ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of Supported <Transfer delay>s),(list of supported <Traffic handling priority>s) [...] OK	<Delivery order>s),(list of supported <Maximum SDU size>s),(list of supported <SDU error ratio>s),(list of supported <Residual bit error Ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of Supported <Transfer delay>s),(list of supported <Traffic handling priority>s) [...] OK
Difference	<p>SIM5360</p> <PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol. IP Internet Protocol PPP Point to Point Protocol IPV6 Internet Protocol Version 6(reserved) IPV4V6 Dual PDN Stack <p>SIM5320</p> <PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol. IP Internet Protocol PPP Point to Point Protocol IPV6 Internet Protocol Version 6(reserved)	

8.4 AT+CGSOCKQMIN Quality of serviceprofile (minimum acceptable)

	SIM5360 AT+CGSOCKQMIN=? +CGSOCKQMIN: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s) , (list of supported <peak>s), (list of supported <mean>s) [<CR><LF> +CGSOCKQMIN: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s) , (list of supported <peak>s), (list of supported <mean>s)[...]] OK <i>If error:</i> ERROR	SIM5320 AT+CGSOCKQMIN=? +CGSOCKQMIN: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s) , (list of supported <peak>s), (list of supported <mean>s) [<CR><LF> +CGSOCKQMIN: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s) , (list of supported <peak>s), (list of supported <mean>s)[...]] OK <i>If error:</i> ERROR
Difference	<p>SIM5360</p> <PDP_type> (Packet Data Protocol type) a string parameter which specifies the	

	<p>type of packet data protocol.</p> <p>IP Internet Protocol</p> <p>PPP Point to Point Protocol</p> <p>IPV6 Internet Protocol Version 6(reserved)</p> <p>IPV4V6 Dual PDN Stack</p> <p>SIM5320</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <p>IP Internet Protocol</p> <p>PPP Point to Point Protocol</p> <p>IPV6 Internet Protocol Version 6(reserved)</p>
--	--

8.5 AT+CGSOCKEQMIN 3G quality of service profile (minimum acceptable)

SIM5360	SIM5320
<p>AT+CGSOCKEQMIN=?</p> <p>+CGSOCKEQMIN: <PDP_type>,(list of supported <Traffic class>s),(list of supported <Maximum bitrate UL>s),(list of supported <Maximum bitrate DL>s),(list of supported <Guaranteed bitrate UL>s),(list of supported <Guaranteed bitrate DL>s),(list of supported <Delivery order>s),(list of supported <Maximum SDU size>s),(list of supported <SDU error ratio>s),(list of supported <Residual bit error Ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of Supported <Transfer delay>s),(list of supported <Traffic handling priority>s) [<CR><LF>]</p> <p>+CGSOCKEQMIN: <PDP_type>,(list of supported <Traffic class>s),(list of supported <Maximum bitrate UL>s),(list of supported <Maximum bitrate DL>s),(list of supported <Guaranteed bitrate UL>s),(list of supported <Guaranteed bitrate DL>s),(list of supported <Delivery order>s),(list of supported <Maximum SDU size>s),(list of supported <SDU error ratio>s),(list of supported <Residual bit error Ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of Supported <Transfer delay>s),(list of supported <Traffic handling priority>s) [<CR><LF>]</p>	<p>AT+CGSOCKEQMIN=?</p> <p>+CGSOCKEQMIN: <PDP_type>,(list of supported <Traffic class>s),(list of supported <Maximum bitrate UL>s),(list of supported <Maximum bitrate DL>s),(list of supported <Guaranteed bitrate UL>s),(list of supported <Guaranteed bitrate DL>s),(list of supported <Delivery order>s),(list of supported <Maximum SDU size>s),(list of supported <SDU error ratio>s),(list of supported <Residual bit error Ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of Supported <Transfer delay>s),(list of supported <Traffic handling priority>s) [<CR><LF>]</p> <p>+CGSOCKEQMIN: <PDP_type>,(list of supported <Traffic class>s),(list of supported <Maximum bitrate UL>s),(list of supported <Maximum bitrate DL>s),(list of supported <Guaranteed bitrate UL>s),(list of supported <Guaranteed bitrate DL>s),(list of supported <Delivery order>s),(list of supported <Maximum SDU size>s),(list of supported <SDU error ratio>s),(list of supported <Residual bit error Ratio>s),(list of supported <Delivery of erroneous SDUs>s),(list of Supported <Transfer delay>s),(list of supported <Traffic handling priority>s) [<CR><LF>]</p>

	Supported <Transfer delay>s),(list of supported <Traffic handling priority>s) [...] OK	Supported <Transfer delay>s),(list of supported <Traffic handling priority>s) [...] OK
Difference	<p>SIM5360</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <ul style="list-style-type: none"> IP Internet Protocol PPP Point to Point Protocol IPV6 Internet Protocol Version 6(reserved) IPV4V6 Dual PDN Stack <p>SIM5320</p> <p><PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol.</p> <ul style="list-style-type: none"> IP Internet Protocol PPP Point to Point Protocol IPV6 Internet Protocol Version 6(reserved) 	

10 Internet Service Command

10.1 Secure File Transfer Protocol Service

10.1.1 AT+CFTPSPUTFILE Put a file in module EFS to FTPS server

	SIM5360	SIM5320
	AT+CFTPSPUTFILE=“<filepath>”,<dir>[,<rest_size>] OK + CFTPSPUTFILE: 0 <i>If list error:</i> + CFTPSPUTFILE: <err> ERROR <i>If other error:</i> ERROR	AT+ CFTPSPUTFILE =“<filepath>”,<dir> OK + CFTPSPUTFILE: 0 <i>If list error:</i> + CFTPSPUTFILE: <err> ERROR <i>If other error:</i> ERROR
Difference	SIM5360 <dir> The directory that contains the file to be uploaded: 0 – current directory [refer to AT+FSCD] 1 – “C:/Picture” directory 2 – “C:/Video” directory 3 – “C:/VideoCall” directory 4 – “D:/Picture” directory 5 – “D:/Video” directory 6 – “D:/VideoCall” directory 7 – “C:/Audio” directory 8 – “D:/Audio” directory <rest_size> The value for FTP “REST” command which is used for broken transfer when transferring failed last time. It’s range is 0 to 2147483647. SIM5320 <dir> The directory that contains the file to be uploaded, refer to AT+FSCD .	

10.1.2 AT+CFTPSGET Get a file from FTPS server to serial port

	SIM5360	SIM5320
	AT+CFTPSGET=“<filepath>” [,<rest_size>] OK +CFTPSGET: DATA,<len> ... +CFTPSGET: DATA,	AT+CFTPSGET=“<filepath>”[,<rest_size>][,<using_cache>]] <i>If the <using_cache> is 0 (default):</i> OK +CFTPSGET: DATA,<len> ...

<pre> <len> +CFTPSGET: 0 <i>If list error:</i> + CFTPSGET: <err> ERROR <i>If other error:</i> ERROR </pre>	<pre> +CFTPSGET: DATA, <len> +CFTPSGET: 0 <i>If the <using_cache> is 1:</i> OK +CFTPS: RECV EVENT AT+CFTPSCACHERD? +CFTPSCACHERD: 102400 OK //output cached data now: AT+CFTPSCACHERD +CFTPSGET: DATA,<len> ... OK +CFTPSGET: 0 <i>If list error:</i> + CFTPSGET: <err> ERROR <i>If other error:</i> ERROR </pre>
Difference	<p>SIM5360</p> <p>SIM5320</p> <p><using_cache></p> <ul style="list-style-type: none"> 0 – Do not use cache 1 – Use cache(Data will be output using AT+CFTPSCACHERD command)

11 GPS Related Command

11.1 AT+CGPSINFO Get GPS fixed position information

SIM5360	SIM5320
AT+CGPSINFO=<time> OK +CGPSINFO: [<lat>],[<N/S>],[<log>],[<E/W>],[<date>],[<UTC time>],[<alt>],[<speed>],[<course>]	AT+CGPSINFO=<time> OK +CGPSINFO: [<lat>],[<N/S>],[<log>],[<E/W>],[<date>],[<UT C time>],[<alt>],[<speed>],[<course>] AmpI/AmpQ: <AmpI>/<AmpQ>
Difference	SIM5360 does not support this parameter SIM5320 AmpI/AmpQ: <AmpI>/<AmpQ>

11.2 AT+CGPSNMEA Configure NMEA sentence type

SIM5360	SIM5320
AT+CGPSNMEA=? +CGPSNMEA: (scope of <nmea>) OK AT+CGPSNMEA? +CGPSNMEA: <nmea> OK AT+CGPSNMEA=<nmea> OK	AT+CGPSNMEA=? +CGPSNMEA: (scope of <nmea>) OK AT+CGPSNMEA? +CGPSNMEA: <nmea> OK AT+CGPSNMEA=<nmea> OK
Difference	SIM5360 <nmea> Range – 0 to 31 SIM5320 <nmea> Range – 0 to 511

12 File System Related Commands

12.1 AT+FSMEM Check the size of available memory

	SIM5360	SIM5320	
AT+FSMEM=?		AT+FSMEM=?	
<i>If SD card exist:</i>		OK	
+FSMEM: (list of supported <limit>s),(list of supported <timer>s)		+FSMEM: (list of supported <limit>s),(list of supported <timer>s)	
OK		OK	
<i>If SD card doesn't exist:</i>			
OK			
AT+FSMEM?		AT+FSMEM?	
AT+FSMEM=<limit>,<timer>		AT+FSMEM	
AT+FSMEM		+FSMEM: C:(<total>, <used>)	
<i>If SD card exist:</i>		OK	
+FSMEM: C:(<total>, <used>), D:(<total>, <used>)		+FSMEM: C:(<total>, <used>), D:(<total>, <used>)	
OK		OK	
<i>If SD card doesn't exist:</i>			
+FSMEM: C:(<total>, <used>)			
OK			
Difference	SIM5320 does not support AT+FSMEM? SIM5320 does not support AT+FSMEM=<limit>,<timer> SIM5320 does not support SD Card		

12.2 AT+FSLOCA Select storage place

	SIM5360	SIM5320
AT+FSLOCA=?		AT+FSLOCA=?
+FSLOCA: (list of supported <loca>s)		+FSLOCA: (list of supported <loca>s)
OK		OK
AT+FSLOCA?		AT+FSLOCA?
+FSLOCA: <loca>		+FSLOCA: <loca>
OK		OK
AT+FSLOCA=<loca>		AT+FSLOCA=<loca>
OK		OK
Difference	SIM5360 <loca> range 0~1 0: C:/ 1:D:/ SIM5320 <loca> always 0 (C:/) , SIM5320 not support SD Card	

12.3 AT+FSFMT Format the storage card

SIM5360	SIM5320
AT+FSFMT=?	
OK	
AT+FSFMT OK	

Difference SIM5320 does not support sdcard. So SIM5320 does not support this command

Contact us

Shanghai SIMCom Wireless Solutions Ltd.

Add: Building A, SIM Technology Building, No.633, Jinzhong Road, Changning District

200335

Tel: +86 21 3252 3300

Fax: +86 21 3252 3301

URL: <http://www.sim.com/wm/>